

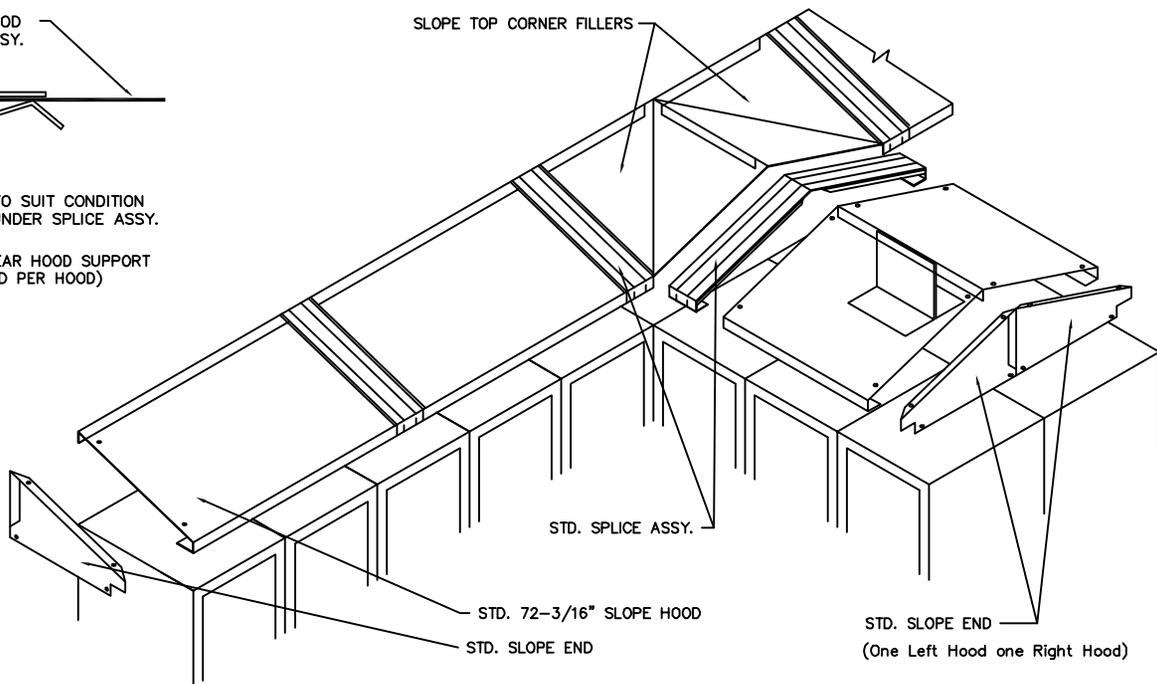



INSTALLER TO CUT HOOD TO SUIT CONDITION AND CONCEAL CUT EDGE UNDER SPLICE ASSY.

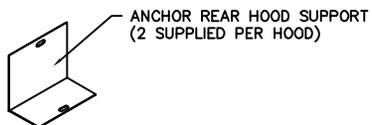

TYPICAL INSTALLATION

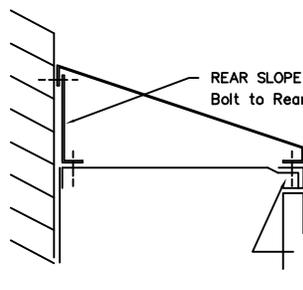

DETAIL OF SLOPE HOOD AT WALL

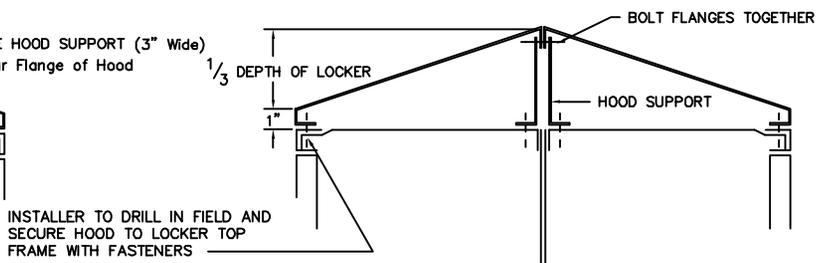

DETAIL OF BACK TO BACK SLOPE HOOD

Please Be Advised:
 SHOP DRAWINGS ARE TO ENSURE WE UNDERSTAND YOUR REQUEST. YOUR APPROVAL OF THESE SHOP DRAWINGS OVERRIDES ANY OTHER SPECIFICATIONS OR DOCUMENTATION. PLEASE CHECK AND APPROVE AS WE ARE GOING TO MANUFACTURE MATERIAL AS SHOWN ON THESE DRAWINGS

SLOPE HOOD DETAIL

NOT TO SCALE
 FOR REFERENCE ONLY.

WEC
 MANUFACTURING
 Phone: 901-367-3922
 Fax: 901-367-3923